

Prompt for Verification placements:



During verification, left-hand 2 digits show number of good placements, right-hand 2 digits show total number of placements (good & bad):



As soon as the required number of good placements is reached, the **Nohmad** sends the results to the Server, and starts scrolling a single dot across the display while it awaits the Servers response:



If the server accepts the results, the last 4 digits of the new ID are displayed:



If the server rejects the results, the digits are blanked and just the 4 dots are lit. This is the indication that the Enrolment failed and, again, that the **Nohmad** is now ready for another.



**FINGER POSITIONING**...It is essential that the position of the finger or fingers is constant. This is most easily maintained by mounting the **Nohmad** at a height whereby easy and comfortable placing of the finger is possible.

The finger should be completely flat and straight against the reading platen.



NOHMAD GPRS TERMINAL

FINGERPRINT (PLACEMENT) ENROLMENT GUIDE

**1 INTRODUCTION...** Thank you for purchasing the **Nohmad** GPRS Fingerprint terminal. To ensure you get the best from this product, some careful system configuration is required. Please take time to read the setup notes fully below before proceeding ...

**2 ENROLMENT BASICS...** It is critical to the operation of the terminal that users are enrolled correctly onto the system. This is a simple task to carry out as long as some basic rules are adhered to in the process... see the **Finger Positioning** section.

**3 FINGER CONDITION...** The finger or fingers to be enrolled must be dry, clean and free of any dirt or dust. In other words, clean hands.

**4 FINGER POSITION...** It is essential that the position of the finger or fingers is constant. This is most easily maintained by mounting the Terminal at a height whereby easy and comfortable placing of the finger is possible.

The finger should be completely flat and straight against the reading platen.

Always enrol with the finger in a position that can easily be repeated.

**5 FINGER PRESSURE...** A constant pressure should be applied. Too light and the reader will not register. Too heavy and it will not necessarily be possible to achieve a constant read.



**6 NORMAL DISPLAY...** In normal operation the Nohmad will display the current time.

For example, 12:13 will be displayed as:



The dot between the second and third number blinks at approx. 2 second intervals.

**7 ENROLLING A USER ...** Remote enrolment can be instigated either via software or at the **Nohmad** itself by a designated supervisor.

To instigate an enrolment at the **Nohmad**, the supervisor must first have their finger read twice in quick succession. It will then go into enrolment mode:

Prompt for 1st placement of 1st finger:



After 1st placement of 1st finger, the Score is displayed for 1s:

This score is below 10:



This score is below 100:



Prompt for 2nd placement of 1st finger:



After 2nd placement of 1st finger, the Score is displayed for 1s:

This score is below 10:



This score is below 100:



If configured to do so, the prompt for the 1st placement of the 2nd finger will show:



After 1st placement of 2nd finger, the Score is displayed for 1s:

This score is below 10:



This score is below 100:



Prompt for 2nd placement of 2nd finger:



After 2nd placement of 2nd finger, the Score is displayed for 1s:

This score is below 10:



This score is below 100:

